



How to use your Simon



Self-Contained Control Panels




Simon 3
24 Zones
6 Users
2-Way Voice
Panel Voice
DTIM

System Features

- 24 Zones
- 2 Hardwire Zones
- 6 User Codes
- 100 Event Buffer
- Latchkey Function
- Pager Notification
- Voice Event Notification
- Alarm.com ready
- Voice Descriptors
- Emergency Buttons
- Remote Access
- Light Functions
 - Time Activated
 - Sensor Activated
 - Entry/Exit


Set System Time

 - Enter Program Mode
- Press Clock Set from Start Menu
- Press Hours + and - to set.
- Press Minutes + and - to set.
- Press Done.

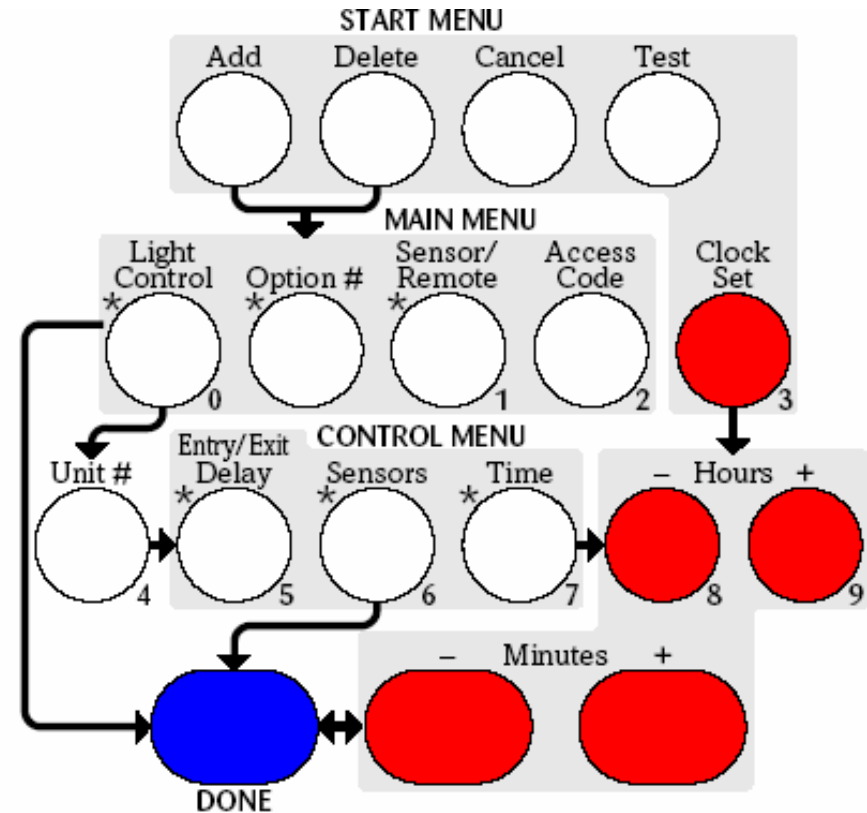

Light Control

 - Set House code to appropriate letter code A-P
- Set all lamp, appliance, and universal modules to the same house code.
- Set the remote siren module 1 letter code higher .

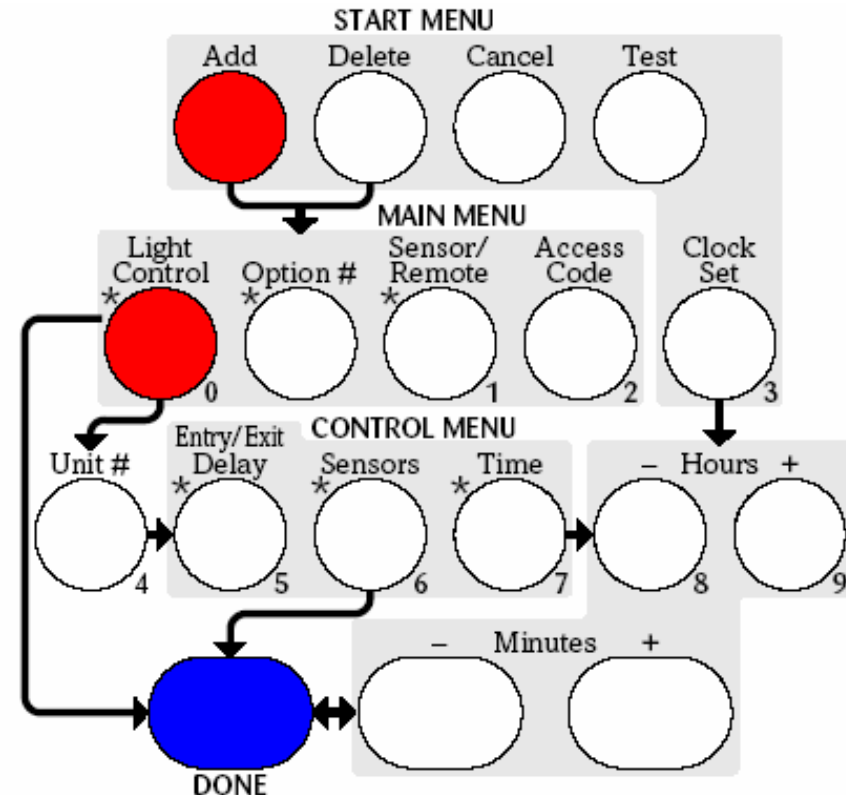

X-10 Controllers

- X-10 modules have 2 settings
 - Unit Number (1-16) Simon uses 1-8
 - House Code (A-P)
- Lamps set to Unit 10 will flash arming levels
- Siren set to Unit 9 will sound both status and alarm sounds



Latchkey Programming

 
- Option 43 - Pager phone number
- Option 44 - 8 for Latchkey, 9 for Latchkey and Alarms
- Option 03 - Set time for Latchkey
- To activate Latchkey press Arm Motions button twice when arming the system

Testing

- Phone Test
 - In program mode press Test button twice followed by Done
 - Panel will dial phone number (Option 4)
 - When communication is complete panel will respond Phone Test OK
 - If panel does not respond verify programming first.


System Operation

- Press Arm Doors and Windows once
 - Arms perimeter sensors with an exit delay
- Press Arm Doors and Windows twice
 - Arms perimeter sensors, gives exit delay with no entry delay

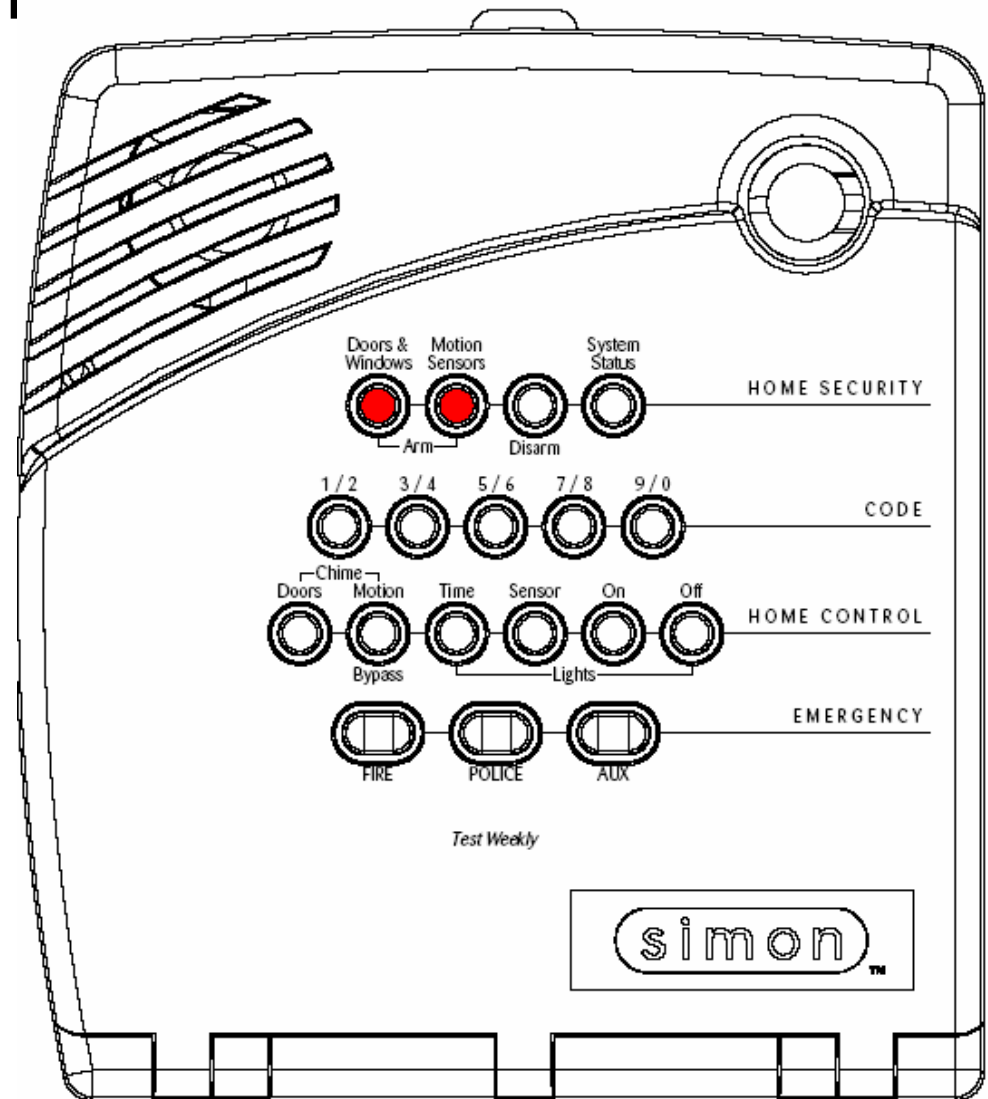


System Operation

 - Disarm System
- Press Disarm
- Enter Code
- Each Button represents 2 numbers

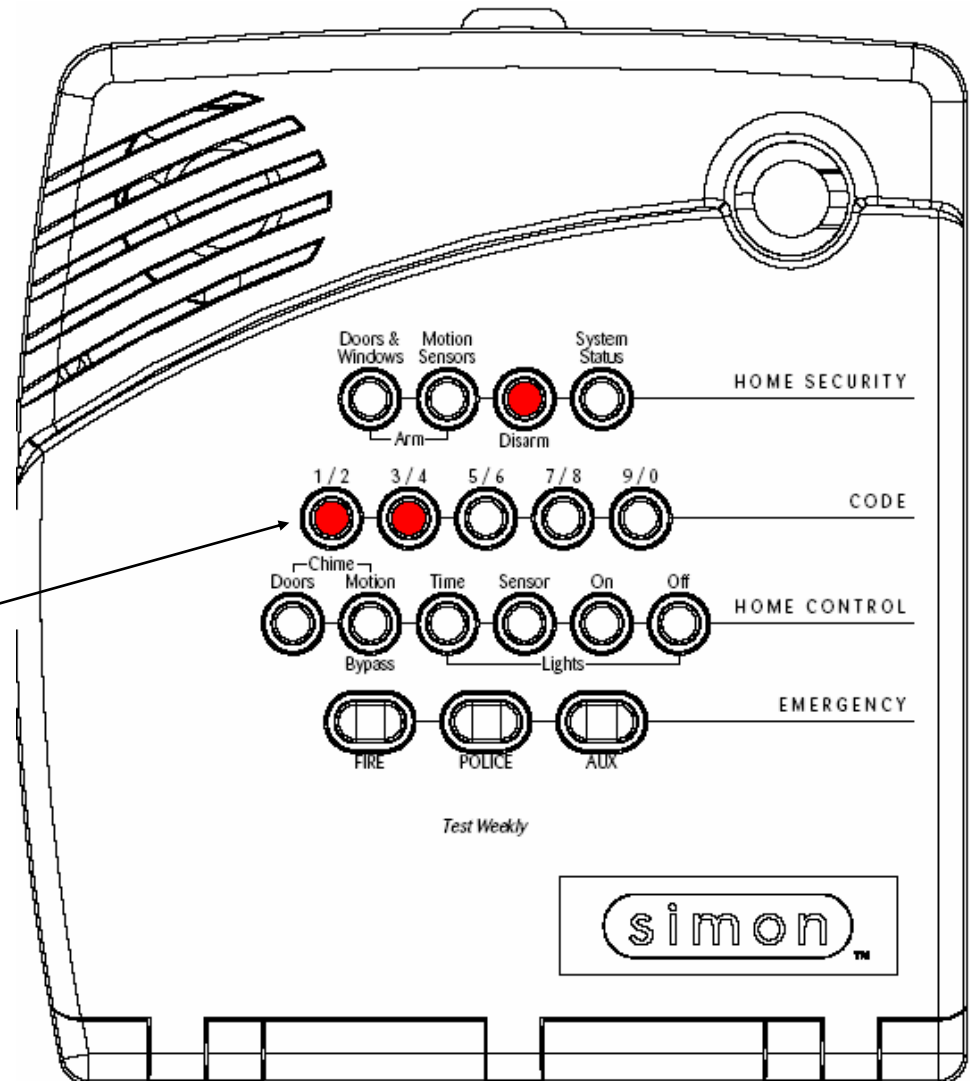


Direct Bypassing

 - Arm to to desired level
- Press the Bypass button
- Select sensor number to bypass
- Enter Master Access Code to bypass

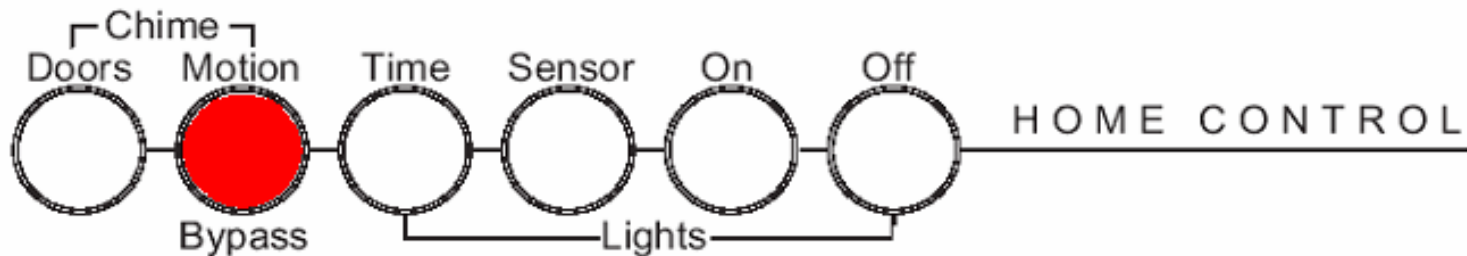


System Operation

 - Light control (All Lights)
 - Press Lights On Button Twice
 - Press Lights Off Button Twice
- Light Control (Individual Control)
 - Handheld or Talking Touchpad
 - Press Light On + individual number 1-8
 - Press Light Off + Individual number 1-8

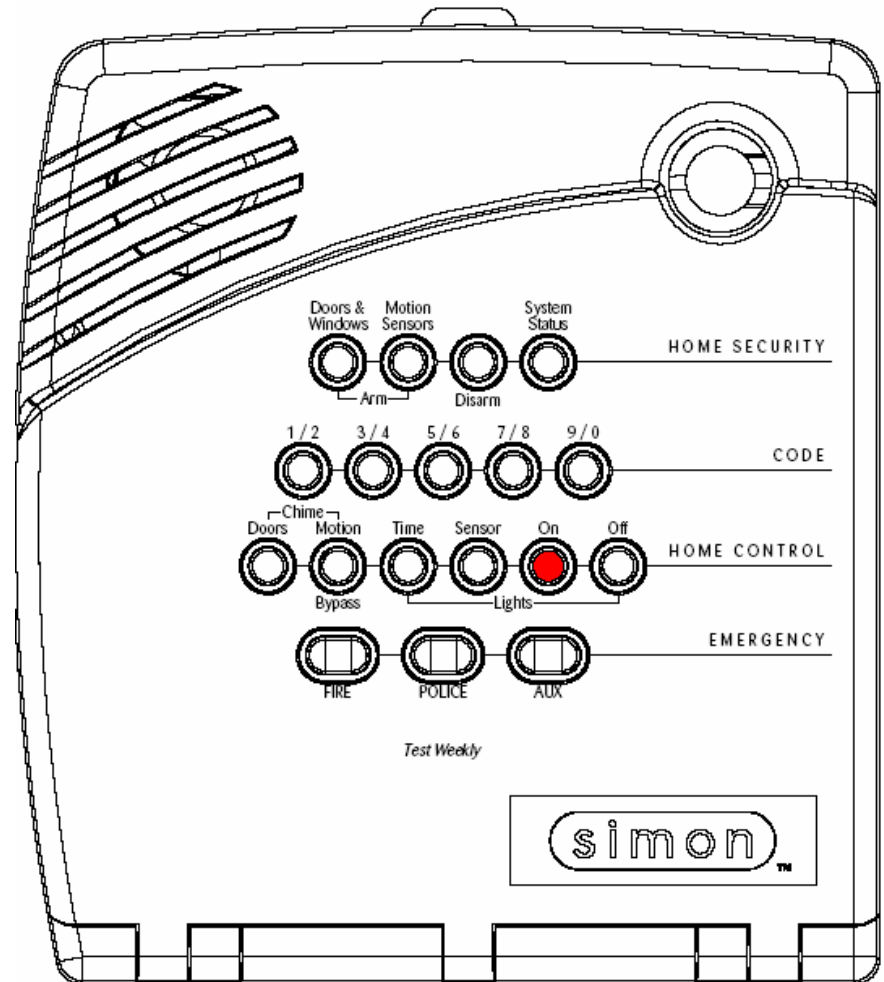

Home Control

 - Chime Doors
 - Beeps when door is opened, if Option 41 is On, you get Voice Chime
- Chime Special Motion
 - Outdoor Motion as sensor type 25
- Lights Time Activated
 - Program lights to turn on and off at set times

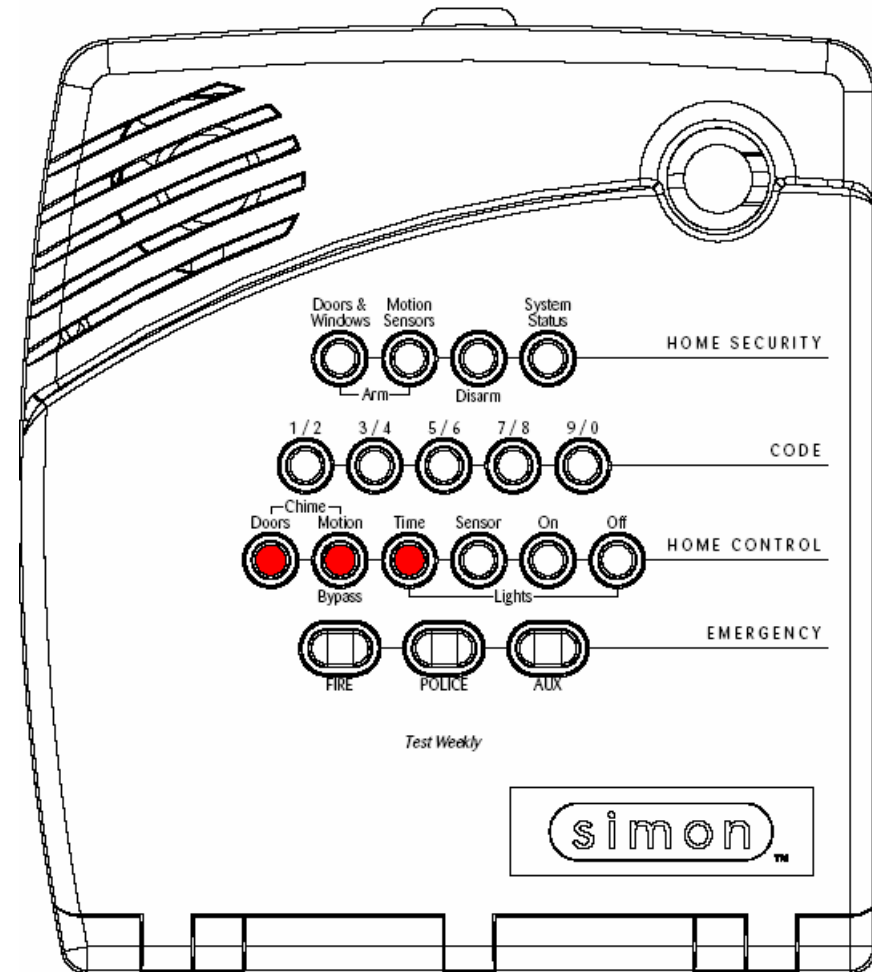

Home Control

- Lights Sensor Activated
 - Program lights to turn on when a sensor is activated
- To activate Home Control feature simply press button
- If there are no lights programmed in the system the panel will respond with “Function not available”

